



LONDON ROSE

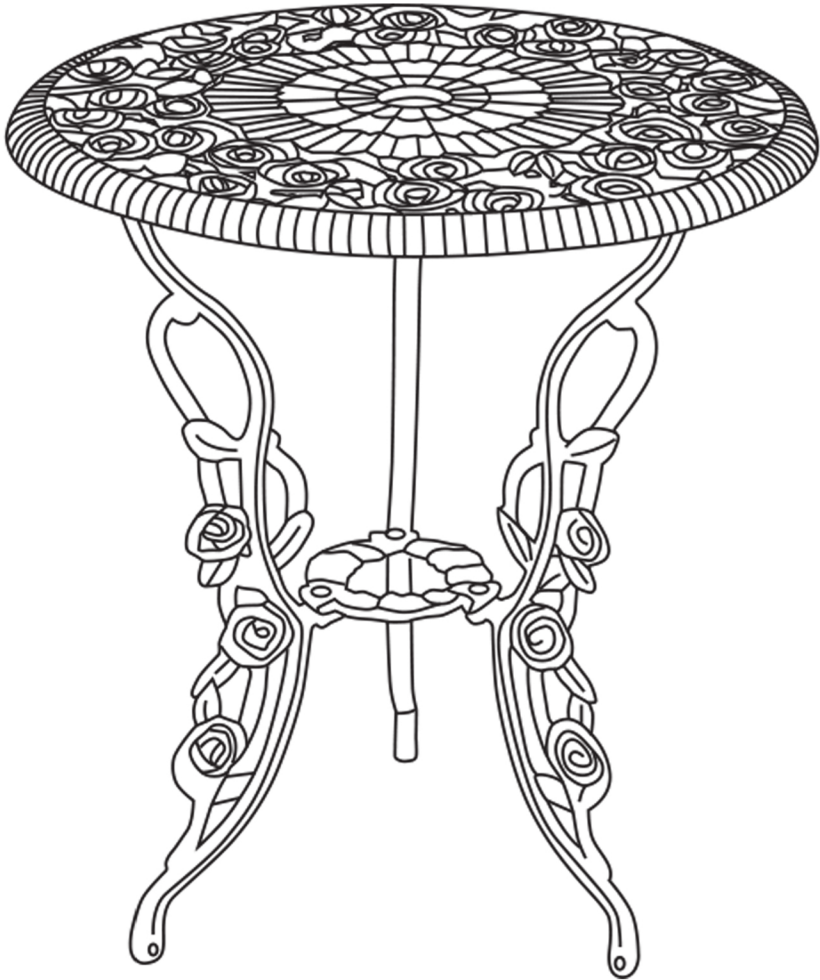

WK-1-LON-ROSE-BISTRO

Lazy Susan

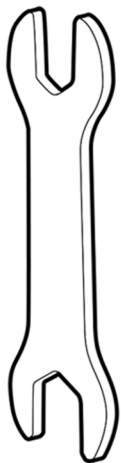


M8-30MM-BOLT



6x

M8-30MM-HD-BOLT-P



3x

M8-NUT



9x

M8-NUT-CAP



9x

M8-WASHER



9x

M8-SPRING-WASH




9x

1




WK-BS-TT-01

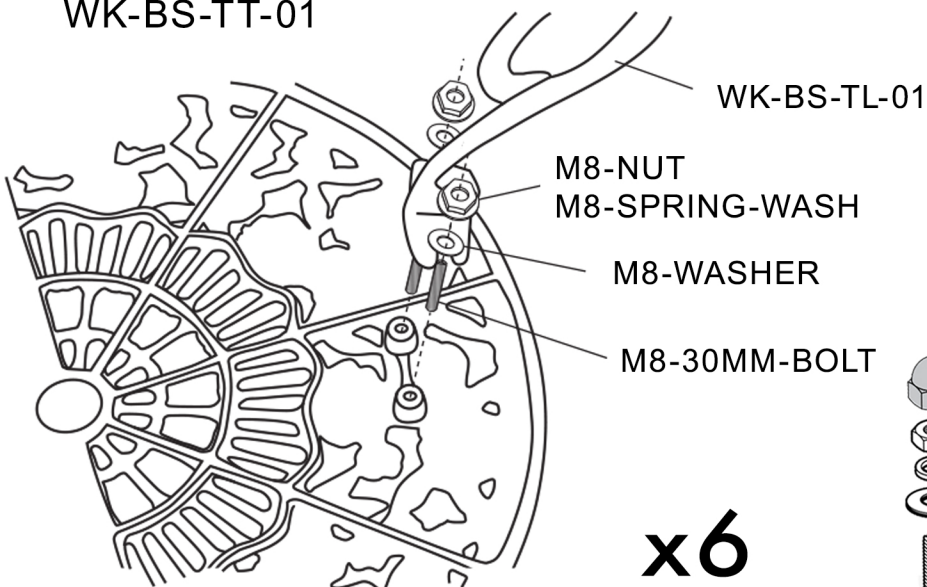


x6




2

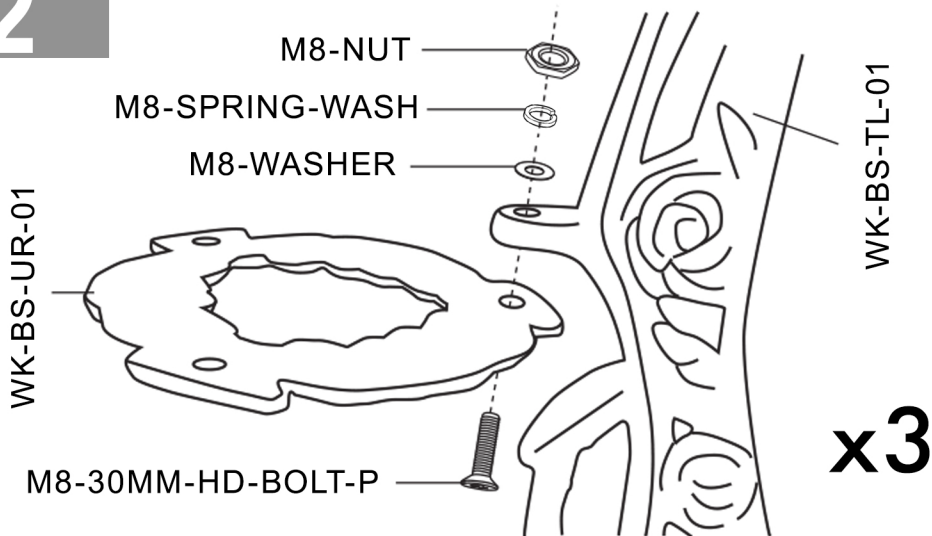

3

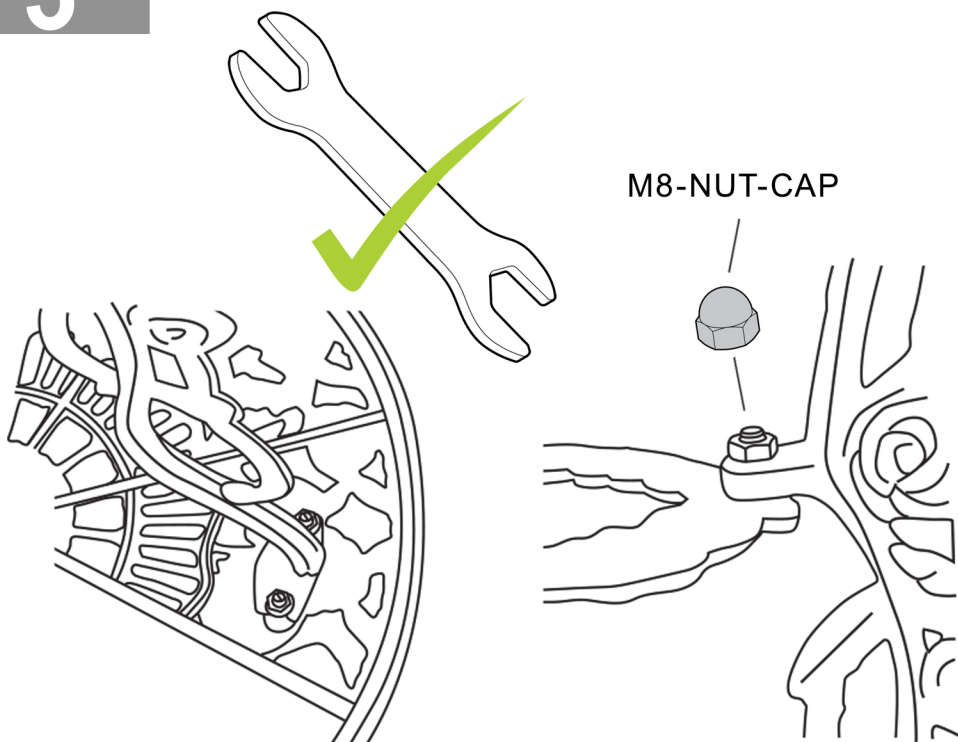

4

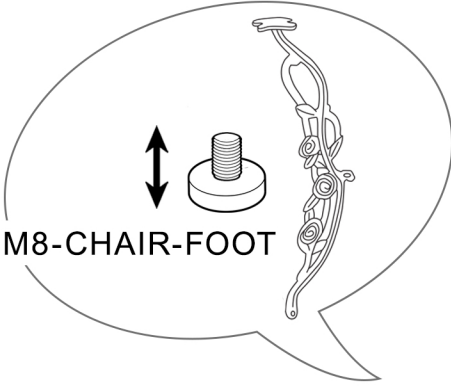

WK-M8-CHAIR-FOOT



WK-BS-TT-01



WK-BS-TL-01




WK-BS-UR-01

LONDON ROSE



WK-1-LON-ROSE-BISTRO

Lazy Susan



M8-30MM-BOLT



20x

M8-NUT



20x

M8-NUT-CAP



20x

M8-WASHER




20x

M8-SPRING-WASH




20x

1

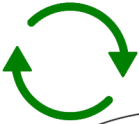

WK-BS-SB-01

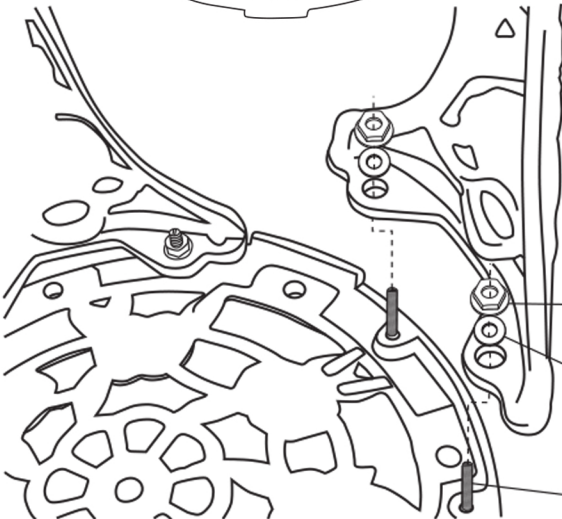



WK-BS-CL-01

M8-NUT
M8-SPRING-WASH


M8-WASHER

M8-30MM-BOLT

2

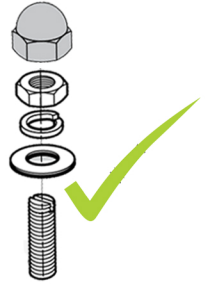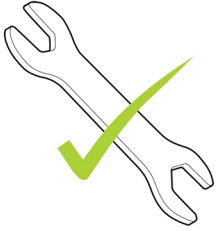

WK-BS-CB-01

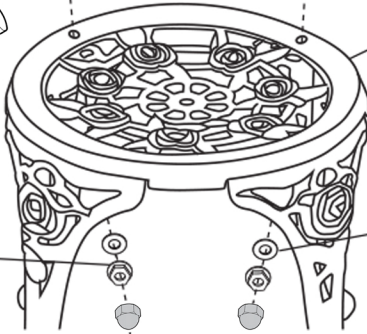

WK-BS-SB-01


M8-NUT


M8-WASHER

M8-NUT-CAP

3

WK-M8-CHAIR-FOOT

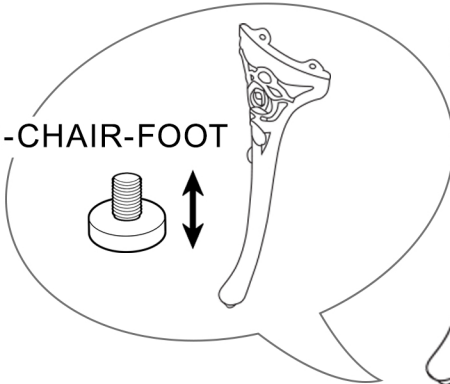

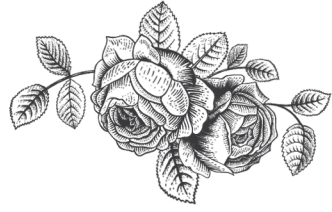

Lazy Susan